

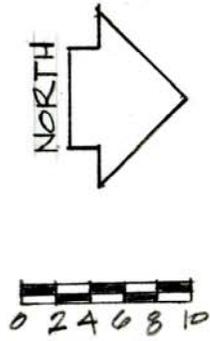


- 9.0 APPENDICES**
- 9.1 WINDOW AND EMBRASURE SCHEDULE**
- 9.2 WINDOW PHOTOGRAPHS**
- 9.3 DOOR AND EMBRASURE SCHEDULE**
- 9.4 DOOR PHOTOGRAPHS**
- 9.5 STRUCTURAL REPORT**
- 9.6 STRUCTURAL DRAWINGS**
- 9.7 SOILS REPORT**
- 9.8 STRUCTURAL CALCULATIONS**
- 9.9 PLANS, ELEVATIONS & SECTIONS - Thomas Hardy, circa 1970**

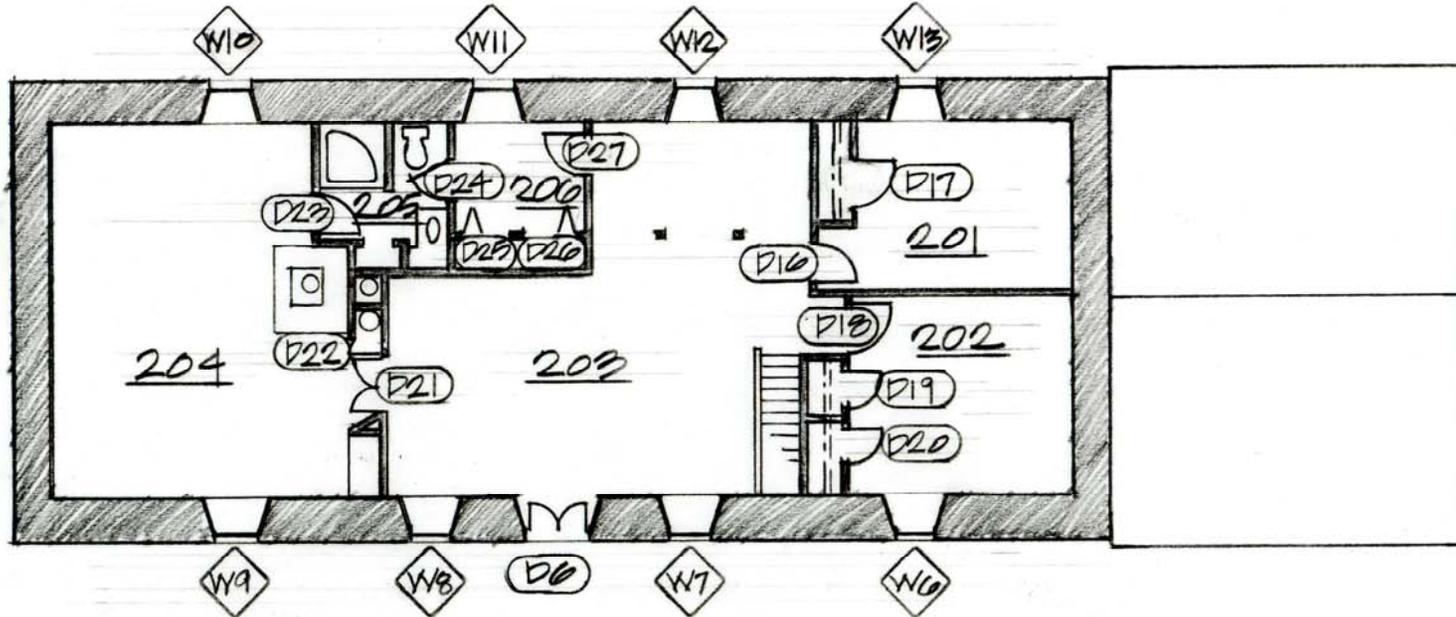

SECOND FLOOR

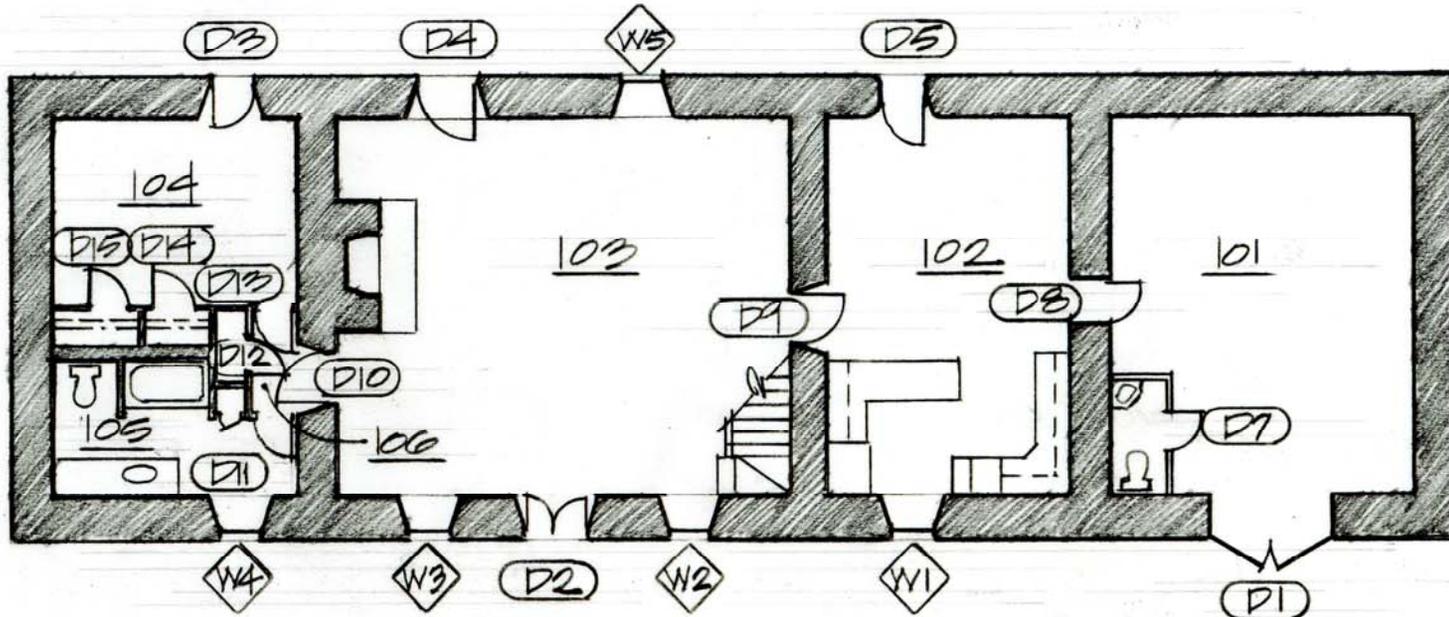

FIRST FLOOR

RANCHO SAN ANDRES CASTRO ADOBE
WINDOW AND DOOR LOCATION PLAN

9.1

APPENDIX – WINDOW AND EMBRASURE SCHEDULE

WINDOW & EMBRASURE SCHEDULE – Rancho San Andreas Castro Adobe

Page 1 of 2

#	Window			Embrasure		Trim		Notes
	Sash		Hardware	Dimensions	Materials	Exterior	Interior	
	Type	Size		WxH@window/ WxH @ wall / depth / sill height	soffit / reveals / sill			
W1	A	2'-4" x 3'-10"	Thumb lift at bottom interior of lower sash	2"-6" x 4'-0" 3"-6" x 4'-0" 1'-8½" 2'-½"	2 boards, hand planed, 15¼" & 5" 6½" & 15" 12½" & 6½"	hand planed, mitered, 1"x3" beaded at window, profile at wall	hand planed, mitered, 1"x3" beaded at window, profile at wall	12/12 (2 high, 3 wide) Slender muntins & parting rails. Muntins rounded on top sash, curved on bottom sash. Sash recessed 5½" from face of ext wall. 2 pair shutter hinge scars in ext trim at jamb. Yellow paint on shash.
W2	A	2'-4" x 3'-10"	Thumb lift at bottom interior of lower sash	2"-6" x 4'-0" 3"-6" x 4'-0" 1'-8½" 2'-1"	2 boards, hand planed, 15" & 5" 8" & 14¼" 14¾" & 6"	hand planed, mitered, 1"x3" beaded at window, profile at wall	hand planed, mitered, 1"x3" beaded at window, profile at wall	12/12 (2 high, 3 wide) Slender muntins & parting rails. Muntins rounded on top sash, curved on bottom sash. Sash recessed 5½" from face of ext wall. 2 pair shutter hinge scars in ext trim at jamb. Worn exterior sill.
W3	A	2'-4" x 3'-10"	none	2"-6" x 4'-0" 4'-0" x 4'-0" 1'-8" 2'-½"	2 boards, hand planed 14½" & 5" 8" & 14¼" 15" & 6"	hand planed, mitered, 1"x3" beaded at window, profile at wall	hand planed, mitered, 1"x3" beaded at window, profile at wall	12/12 (2 high, 3 wide) Slender muntins & parting rails. Muntins curved on top and bottom sash. Sash recessed 5½" from face of ext wall. 2 pair shutter hinge scars in ext trim at jamb.
W4	A	2'-4" x 3'-10"	Thumb lift at bottom interior of lower sash	2"-8" x 4'-0" 4'-0" x 4'-0" 1'-8" 1'-11"	2 boards, hand planed, 14½" & 5" 8½" & 14" 11½" & 8½"	hand planed, mitered, 1"x3" beaded at window, profile at wall	hand planed, mitered, 1"x3" beaded at window, profile at wall	12/12 (2 high, 3 wide) Slender muntins & parting rails. Muntins rounded on top sash, curved on bottom sash. Sash recessed 5½" from face of ext wall. 2 pair shutter hinge scars in ext trim at jamb.
W5	A	2'-4" x 3'-10"	none	2"-6" x 4'-0" 4'-0" x 4'-0" 1'-8½" 2'-9½"	2 boards, hand planed 15" & 5" 10½" & 11½" 11½" & 9"	mitered, 1"x3" beaded at window, profile at wall. 1930s	hand planed, mitered, 1"x3" beaded at window, profile at wall	12/12 (2 high, 3 wide) Slender muntins & parting rails. <u>Sash set flush with face of ext wall.</u> Muntins curved on top and bottom sash with Dutchman at sash bottom. 2 pair shutter hinge scars in ext trim at jamb. Embrasure shows rot and water damage needs reconstruction
W6	A	2'-4" x 3'-10"	none	2"-6½" x 4'-1" 3"-8" x 4'-1" 1'-8½" 1'-9"	2 boards, hand planed 10½" & 9½", 11" & 9½", 9½" & 10½"	hand planed, mitered, 1"x3" beaded at window, profile at wall	hand planed, mitered, 1"x3" beaded at window, profile at wall	12/12 (2 high, 3 wide) Slender muntins & parting rails. Muntins curved on top sash, rounded on bottom sash. Sash recessed 5½" from face of ext wall. 2 pair shutter hinge scars in ext trim at jamb.
W7	A	2'-4" x 3'-10"	none	2"-6" x 4'-0" 3"-10" x 4'-0" 1'-8½" 1'-11"	hand planed bds, soffit 10½", 9½", N reveal 9", 12", 1" S reveal 11", 10", 1" Sill 9½" 10½"	hand planed, mitered, 1"x3" beaded at window, profile at wall	hand planed, mitered, 1"x3" beaded at window, profile at wall	12/12 (2 high, 3 wide) Slender muntins & parting rails. Muntins curved on top sash, rounded on bottom sash. Sash recessed 5½" from face of ext wall. 2 pair shutter hinge scars in ext trim at jamb.

#	Window			Embrasure		Trim		Notes
	Sash		Hardware	Dimensions	Materials	Exterior	Interior	
	Type	Size		WxH@ window/ WxH @ wall / depth / sill height	soffit / reveals / sill			
W8	A	2'-4" x 3'-10"	none	2"-6" x 4'-0" 3"-10" x 4'-0" 1'-8½" 1'-11"	2 boards, hand planed, 11½" & 9½", 9½" & 11", 8½" & 12"	hand planed, mitered, 1"x3" beaded at window, profile at wall	hand planed, mitered, 1"x3" beaded at window, profile at wall	12/12 (2 high, 3 wide) Slender muntins & parting rails. Muntins rounded on top sash, round on bottom sash. Sash recessed 5½" from face of ext wall. 2 pair shutter hinge scars in ext trim at jamb.
W9	A	2'-4" x 3'-10"	none	2"-6" x 4'-0" 3"-10" x 4'-0" 1'-8½" 1'-11"	2 boards, hand planed, 9½" & 11", 11" & 10½", 11½" & 9"	hand planed, mitered, 1"x3" beaded at window, profile at wall	hand planed, mitered, 1"x3" beaded at window, profile at wall	12/12 (2 high, 3 wide) Slender muntins & parting rails. Muntins rounded on top sash, round on bottom sash. Sash recessed 5½" from face of ext wall. 2 pair shutter hinge scars in ext trim at jamb.
W10	A	2'-4" x 3'-10"	none	2"-6" x 4'-0" 3"-10" x 4'-0" 2'-0" 1'-1"	hand planed bds, soffit 12", 9½" 2", reveals 12" & 13" sill 12" & 11½"	hand planed, mitered, 1"x3" beaded at window, profile at wall	mitered, 1"x3" beaded at window, profile at wall, Lg wire nails	12/12 (2 high, 3 wide) Slender muntins & parting rails. <u>Sash set flush with face of ext wall.</u> 3½" window frame. Muntins rounded on top sash, curved on bottom sash. 2 pair shutter hinge scars in ext trim at jamb. Wide muntins on top & bottom replaced sash. Embrasure rebuilt circa 1906.
W11	A	2'-4" x 3'-10"	none	2"-6" x 3'-11½" 3"-8" x 3'-11½" 2'-0" 1'-2"	hand planed bds, soffit 7", 6", 4½" & 7" S reveal 7", 9", 9", N reveal beaded 12½", 12" & sill beaded 8", 15½"	mitered, 1"x3" beaded at window, profile at wall, 1930s	rough, butted, 1"x8½" head, 1"x5¾" jambs & sill	12/12 (2 high, 3 wide) Slender muntins & parting rails. <u>Sash set flush with face of ext wall. No shutter hinge scars.</u> 3½" window frame. Muntins curved on top sash, rounded bottom sash. Embrasure rebuilt using beaded hand planed wood from removed portions of early room partition circa 1906.
W12	A	2'-4" x 3'-10"	none	2"-6" x 4'-0" 3"-10" x 4'-0" 2'-0" 1'-2½"	hand planed bds, soffit 7", 5", 5½", 5½" N reveal 7", 9", 9", S reveal beaded 12½", 12", sill beaded 8", 15½"	mitered, 1"x3" beaded at window, profile at wall, 1930s	rough, butted, 1"x5¾" head, jambs & sill	12/12 (2 high, 3 wide) Slender muntins & parting rails. <u>Sash set flush with face of ext wall. No shutter hinge scars.</u> 3½" window frame. Muntins shallow & blunt on top sash, rounded on bottom sash. Embrasure rebuilt using beaded hand planed wood from removed portions of early room partition circa 1906.
W13	A	2'-4" x 3'-10"	none	2"-6" x 4'-0" 3"-10" x 4'-0" 1'-8½" 1'-0"	2 boards, hand planed, 12½" & 11½", 12" & 11½", 12" & 11"	mitered, 1"x3" beaded at window, profile at wall, 1930s	hand planed? mitered, 1"x3" beaded at window, profile at wall	12/12 (2 high, 3 wide) Slender muntins & parting rails. Muntins round on top sash, rounded on bottom sash. Sash recessed 5½" from face of ext wall. 2 pair shutter hinge scars in ext trim at jamb. Embrasure racked, jambs parallel. Window fitted with dutchmen at top & bottom circa 1906.

LEGEND

Original late 1840s
 Early late 1840s to early 1880s
 Hansens 1880s to 1914
 Late 1900s to date

